

Installation

1. **The emergency shower must have a flow of 76 litres per minute to function properly. The pipe dimensions must be adjusted to this flow!**

Water supply connection: 3/4" female

Do not install the emergency shower if correct flow can not be guaranteed!

2. **Flush through the system thoroughly so that grindings and other particles are removed.**
3. Install the emergency shower at approximately a height of 2150 mm measured from the floor to the lower edge of the shower head. The shower must be secured so it can hold a weight of minimum 75 kilo.
4. The valve is opened/closed by pulling the handle/rod.
5. Attach the enclosed emergency sign clearly visible.
6. Check the function of the shower by flushing several times.
7. Hand over the instruction sheet to the safety supervisor or other responsible personnel.

Maintenance and operating instructions

1. Inform and train the personnel about the function of the emergency shower and where it is located.
2. The emergency shower should always be in working order.
The emergency shower activates by pulling the handle/rod downwards. The valve is not self-closing. The water will be shut off by pulling the handle/rod back to its initial position.
3. The emergency shower must be easily accessible for immediate use by the victim. Make sure that the area in front is not blocked.

Make sure that the emergency shower is kept clean.
4. **Practice the use of the device continuously.** By doing so, you will avoid stagnant water in the pipes.

Old water accumulates bacteria.
5. **Use safety goggles.**

