
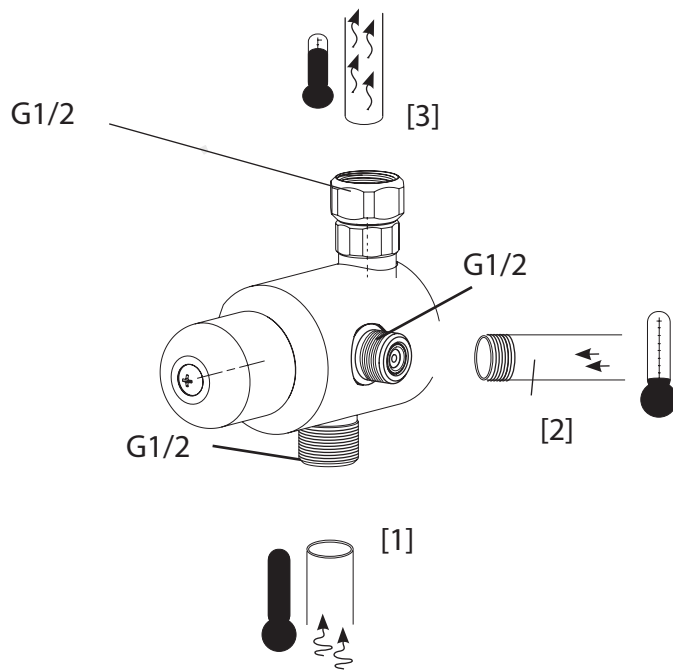


A

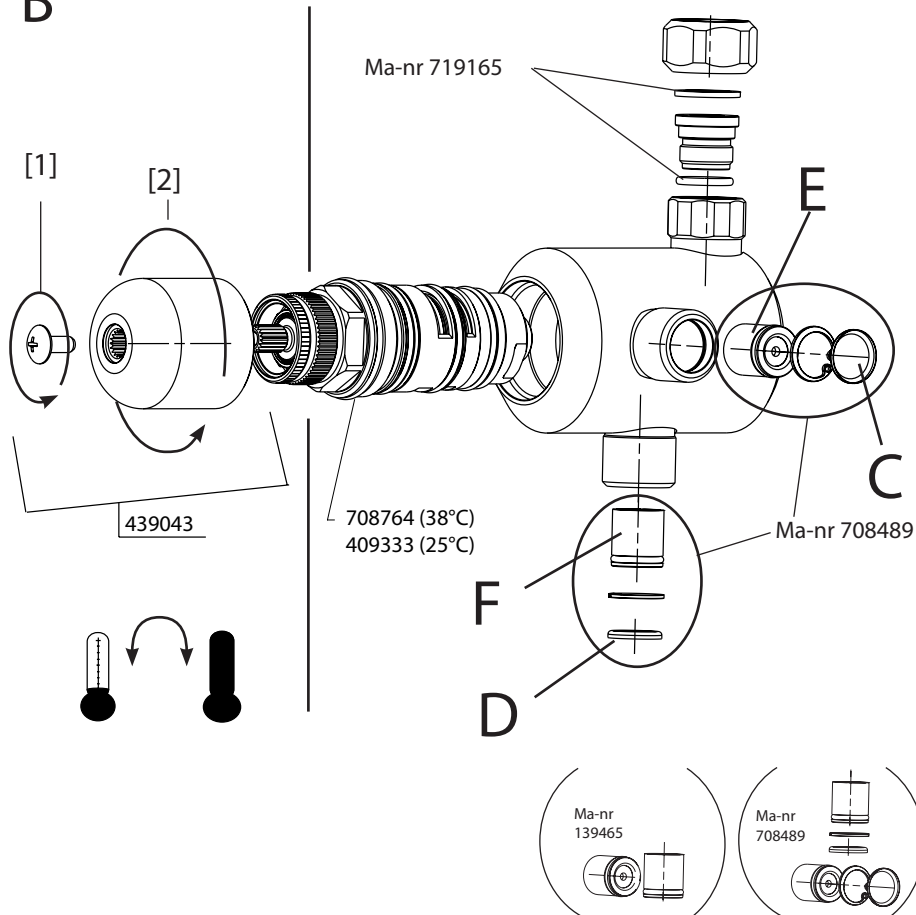

B

**INSTALLATION - A**

NOTE! In new installations, pipes need to be flushed up until the mixer, before the mixer can be fitted. Carry out in the order [1] - [3]. The mixer is calibrated to 38°C (430101) and 25°C (430103). If a different temperature is required see **SETTINGS** and **Changing the temperature**.

SETTINGS

Changing the temperature: B - Loosen the screw a couple of turns. Pull out the tap. Adjusted the tap to the required temperature. Tighten the screw. See [1] - [2].

TROUBLE SHOOTING

Only cold/hot water is coming from the mixer: The mixer is wrongly connected. The hot water should be connected to the mixer's connection nipple marked "H".

Insufficient water flow: Clean the inlets. Turn off the water supply. Dismount the connection pipes and clean the inlets. C, D.

SERVICE**Replacement of non-return valve at inlet of cold water:**

E - Turn off the cold water. Dismantle the connection pipes and remove the filter. Replace the non-return valve Ma-no 139465.

Replacement of non-return valve at inlet of hot water:

F - Dismantle the mixer valve. Replace the non-return valve Ma-no 139465.

MISCELLANEOUS

When there is risk of freezing: (e.g. at unheated holiday homes) the water should be emptied out of the pipes and mixer. Dismantle the mixer.