

## Installation

1. **The eye wash must have a flow of 28 litres per minute to function properly. The pipe dimensions must be adjusted to this flow!**

Water supply connection: ½" female

**Do not install the eye wash if correct flow can not be guaranteed!**

The flow and pressure regulator of the eye wash work automatically at 2,4 -6,5 bar. If the pressure exceeds 6,5 bar it will be necessary to install a reducing valve.

2. **Flush through the system thoroughly so that grindings and other particles are removed.**
3. Attach the enclosed eye wash sign clearly visible.
4. Check the function of the eye wash by flushing several times. Observe that the push plate is not self-closing.
5. Hand over the instruction sheet to the safety supervisor or other responsible personnel.

## Maintenance and operating instructions

1. Inform and train the personnel about the function of the eye wash and where it is located.
2. The eye wash should always be in working order.  
**The eye wash** is activated by **pushing the push plate forward**. The valve is not self-closing. The water is shut of when the push plate is pulled back to the initial position.
3. The eye wash must be easily accessible for immediate use by the victim. Make sure that the area in front is not blocked.  
Krusman eye wash 3830-00 is delivered with dust cover on each spray head. The dust covers are removed when the eyewash is activated.  
Make sure that the eye wash is kept clean.
4. **Practice the use of the device continuously.** By doing so, you will avoid stagnant water in the pipes.  
**Old water accumulates bacteria.**
5. **Use safety goggles.**

